
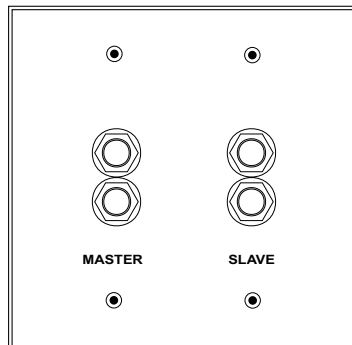



SLAVE JACK

MASTER JACK

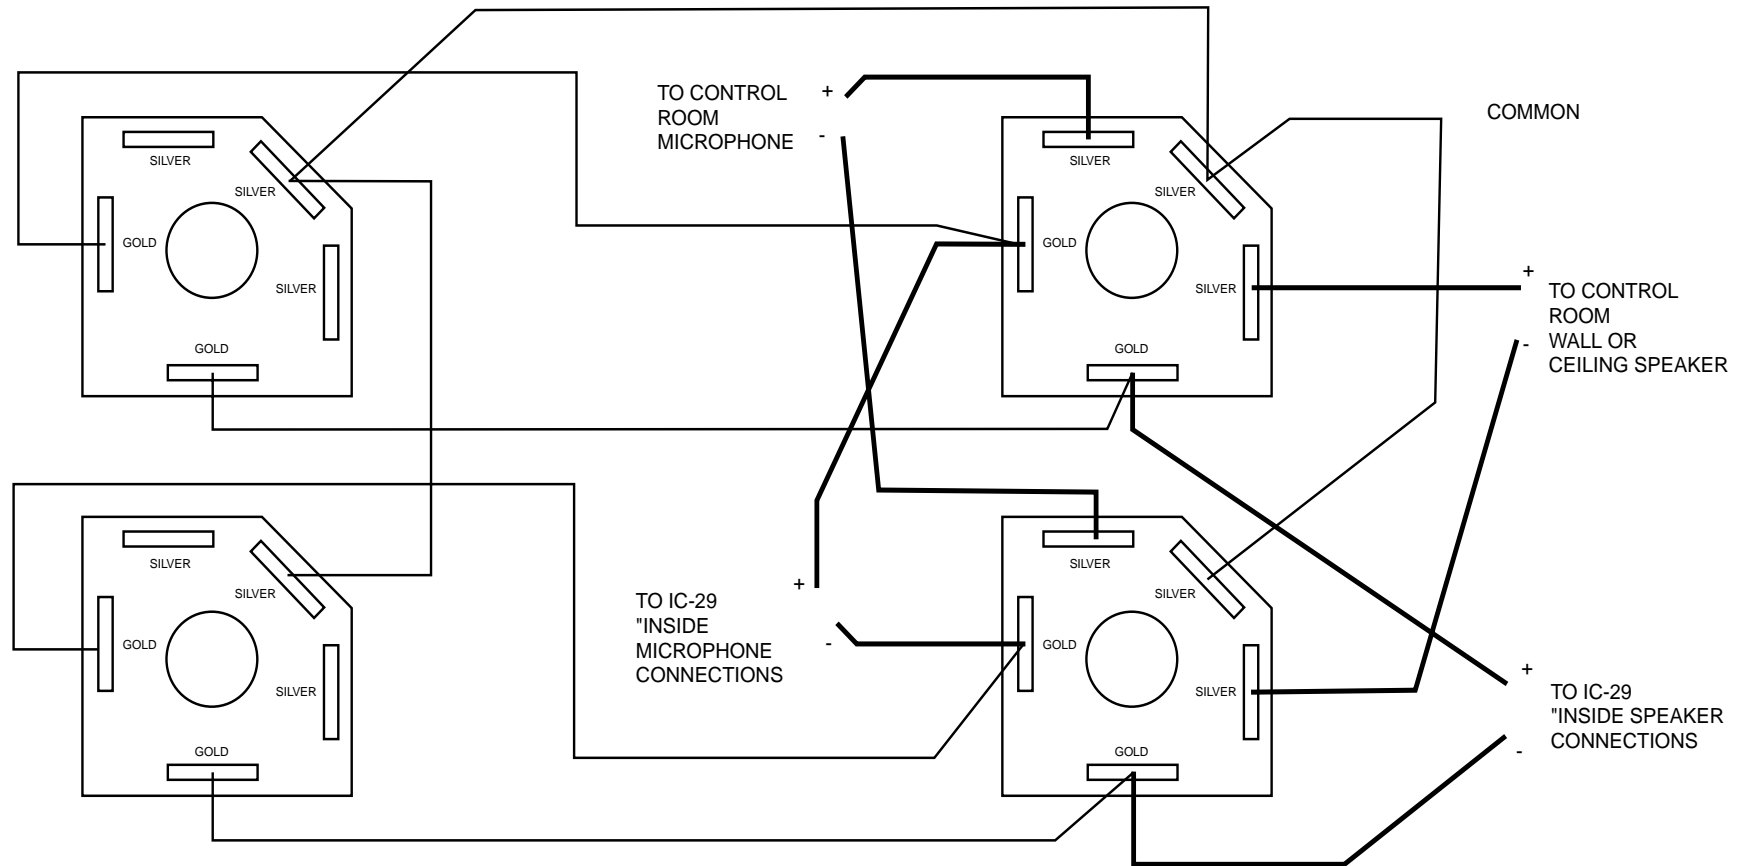

Simpex JP-200 Notes

- 1) Master Jack must have a headset plugged in for the slave jack to work.
- 2) Heavy lines are connections to other devices or the IC-29, the lite lines are internal connections in the JP-200 jack.
- 3) JP200 is not polarity sensitive, when using a phantom-powered microphone. Pin 1 is com, Pin 2 is "+", Pin 3 is "-". When using an unbalanced inside microphone(2 wire) connect Hot to "+" and shield to "com"

JP-200 Dual Headphone Jack Assembly				
 COMMUNICATIONS COMPANY inc. 9181 CHESAPEAKE DR SAN DIEGO, CA 92123 Ph (858)560-4162 Fax (858)560-1923	Drawn	MSJ	Date	12/13/01
	Credited	MSJ	Eng.	MSJ
NO: 677-AD-8688-SP				